




AMPHORA AROMATICS
LIMITED

Version: 01
Created: 07/12/2022

Typical GC Analysis

Product Name:	Coriander Seed Essential Oil	Batch No:	Typical Batch
Method	Carrier Gas: Helium Column: Restek Rxi-1ms 30m x 0.25mm x 0.25µm Detector: MS, Full Scan 50-500amu		
Additional Information			

Abundance

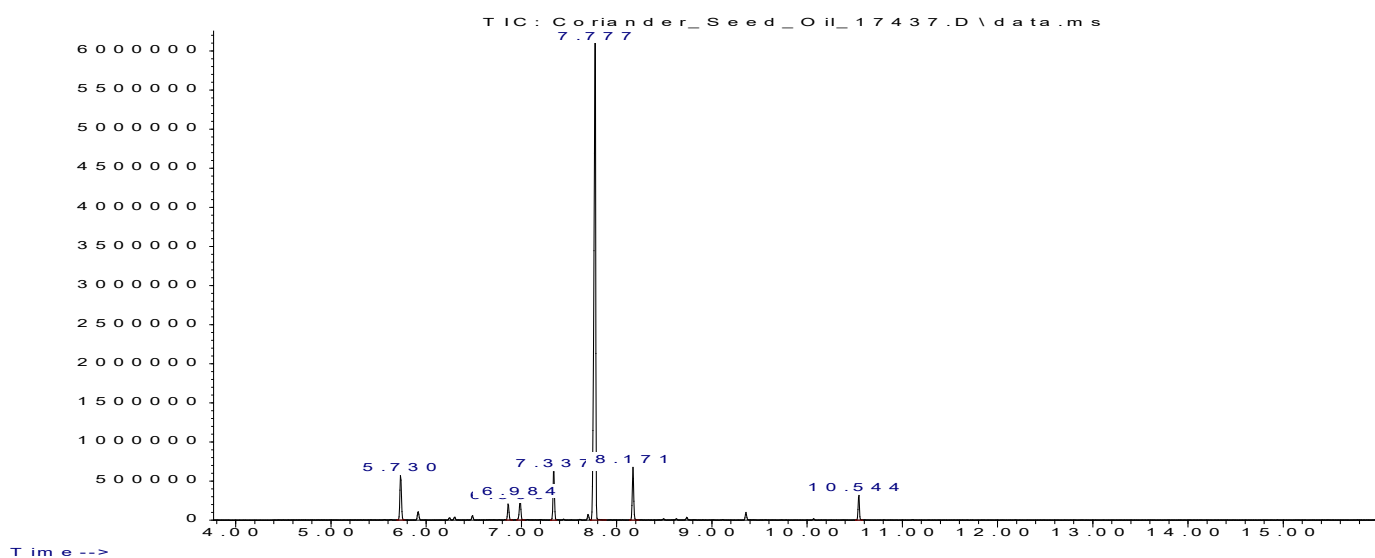

Peak	RT Mins	Compound	Area	Peak start	Peak end	%
1	5.730	α -Pinene	652945	5.694	5.766	5.2
2	6.860	p-Cymene	217091	6.839	6.896	1.7
3	6.984	d-Limonene	310372	6.948	7.026	2.5
4	7.337	γ -Terpinene	686055	7.305	7.368	5.5
5	7.777	Linalool	8358637	7.725	7.881	66.6
6	8.171	Camphor	703250	8.135	8.223	5.6
7	10.544	Geranyl acetate	309935	10.508	10.581	2.5

Amphora Aromatics Ltd,
Airfield House, Western Drive, Bristol, BS14 0AF, UK.
Tel: +44 (0) 117 9087770
E: info@amphora-aromatics.com