


Typical GC Analysis

Product Name:	Myrtle Essential Oil	Batch No:	Typical Batch
Method	Carrier Gas: Helium Column: Restek Rxi-1ms 30m x 0.25mm x 0.25µm Detector: MS, Full Scan 50-500amu		
Additional Information			

Abundance

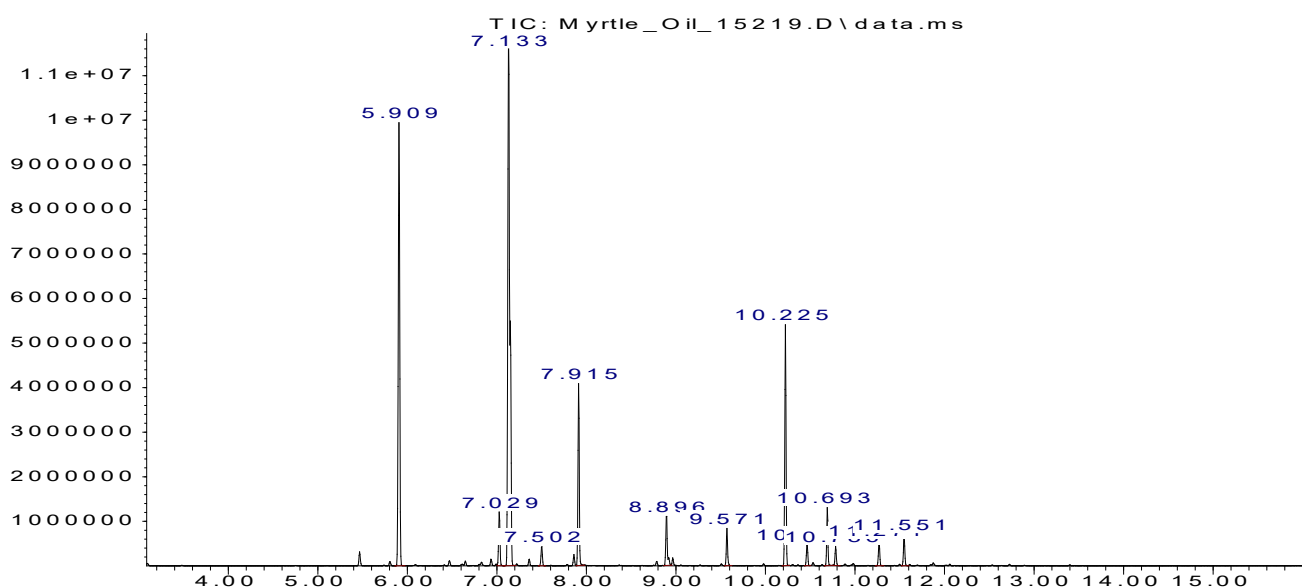

Peak	RT Mins	Compound	Area	Peak start	Peak end	%
1	5.909	α-Pinene	116303791	5.863	5.962	22.5
2	7.029	p-Cymene	12789226	7.004	7.076	2.5
3	7.133	1,8-Cineole & d-Limonene	193596124	7.08	7.201	37.5
4	7.502	γ-Terpinene	4649330	7.464	7.533	0.9
5	7.915	Linalool	39996709	7.885	7.969	7.7
6	8.896	α-Terpineol	13662099	8.867	8.945	2.6
7	9.571	Linalyl acetate	8387056	9.545	9.614	1.6
8	10.225	Myrtenyl acetate	52614939	10.188	10.257	10.2
9	10.467	Terpinyl acetate	5053828	10.438	10.494	1.0
10	10.693	Geranyl acetate	12214841	10.658	10.732	2.4
11	10.786	Methyleugenol	4204587	10.749	10.822	0.8
12	11.271	β-Caryophyllene	5891421	11.228	11.31	1.1
13	11.551	α-Humulene	7362453	11.52	11.591	1.4