




AMPHORA AROMATICS LIMITED

Typical GC Analysis

Product Name:	Neroli Oil Light	Batch No:	
Method	Carrier Gas: Helium Column: Restek Rxi-1ms 30m x 0.25mm x 0.25µm Detector: MS, Full Scan 50-500amu		
Additional Information			

Abundance

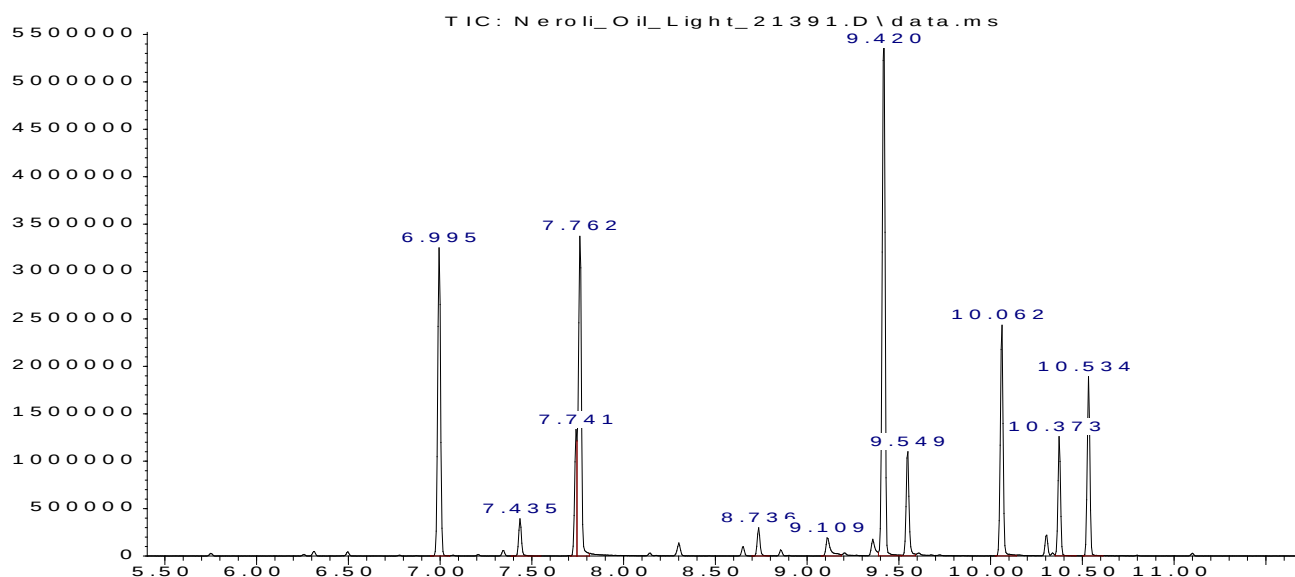

Peak	RT Mins	Compound	Area	Peak start	Peak end	%
1	6.995	d-Limonene	3499454		7.052	14.1
2	7.435	Dihydromyrcenol	412363	7.388	7.544	1.7
3	7.741	Phenylethyl Alcohol	1271970	7.710	7.746	5.1
4	7.762	Linalool	3853858	7.746	7.813	15.6
5	8.736	α-Terpineol	319040	8.700	8.793	1.3
6	9.109	Citronellol	348034	9.078	9.187	1.4
7	9.420	Linalyl acetate	6242304	9.389	9.513	25.2
8	9.549	Citronellal hydrate	1232098	9.513	9.591	5.0
9	10.062	Methyl anthranilate	2600517	10.026	10.140	10.5
10	10.373	Neryl acetate	1213710	10.353	10.461	4.9
11	10.534	Geranyl acetate	1872830	10.503	10.612	7.6