


Typical GC Analysis

Product Name:	Tangerine Essential Oil	Batch No:	Typical Batch
Method	Carrier Gas: Helium Column: RH-1MS+ 30m x 0.25mm x 0.25µm Detector: MS, Full Scan 50-500amu		
Additional Information			

Abundance

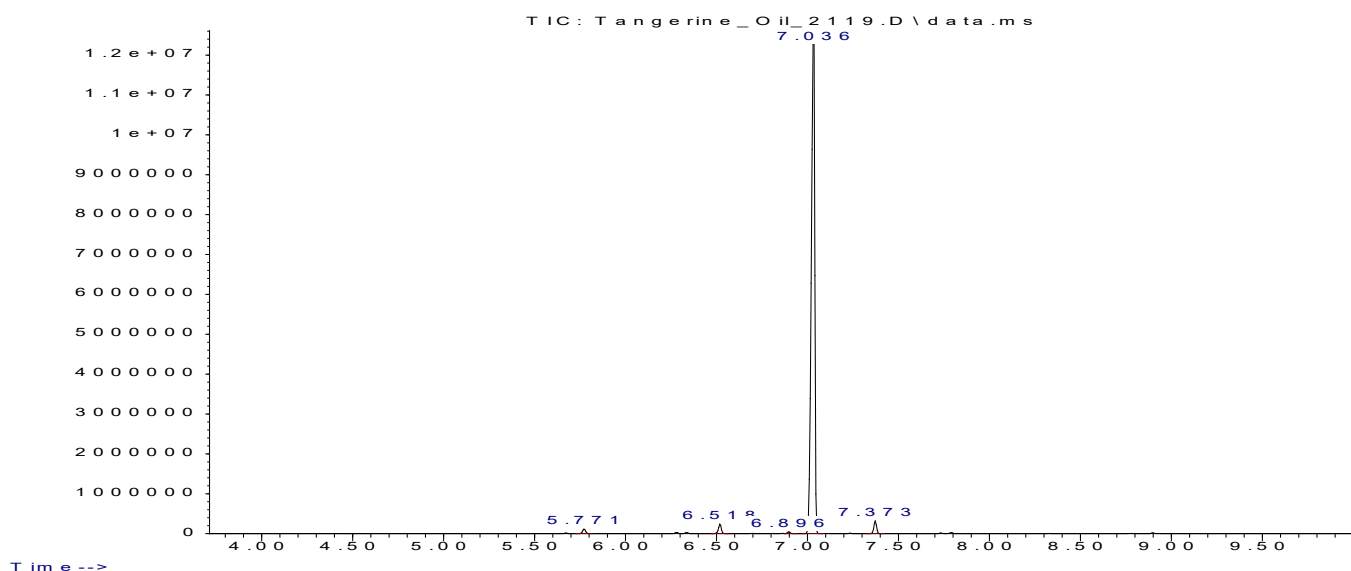

Peak	RT Mins	Compound	Area	Peak start	Peak end	%
1	5.771	α-Pinene	133491	5.730	5.813	0.8
2	6.518	β-Myrcene	266523	6.471	6.559	1.5
3	6.896	p-Cymene	48732	6.875	6.937	0.3
4	7.036	d-Limonene	16658941	6.974	7.082	94.7
5	7.373	γ-Terpinene	330007	7.326	7.414	1.9