


Typical GC Analysis

Product Name:	Yarrow Essential Oil	Batch No:	Typical Batch
Method	Carrier Gas: Helium Column: RH-1MS+ 30m x 0.25mm x 0.25µm Detector: MS, Full Scan 50-500amu		
Additional Information			

Abundance

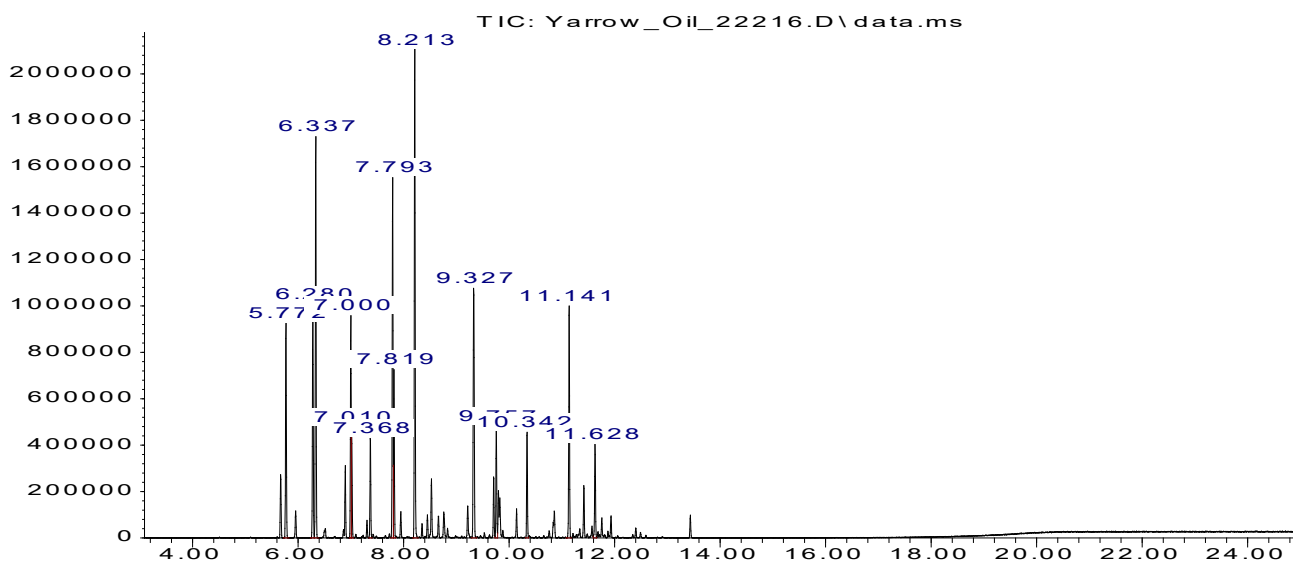

Time-->

Peak	RT Mins	Compound	Area	Peak start	Peak end	%
1	5.772	α-Pinene	1080077	5.725	5.808	5.5
2	6.280	Sabinene	1104549	6.238	6.305	5.6
3	6.337	β-Pinene	1943736	6.305	6.373	9.8
4	7.000	Eucalyptol (1,8-Cineole)	1104509	6.974	7.010	5.6
5	7.010	d-Limonene	369962	7.010	7.047	1.9
6	7.368	γ-Terpinene	471046	7.347	7.399	2.4
7	7.793	Linalool	1711638	7.762	7.808	8.7
8	7.819	Thujone	666001	7.808	7.850	3.4
9	8.213	Camphor	2399836	8.176	8.270	12.1
10	9.327	Piperitone	1520810	9.290	9.384	7.7
11	9.757	Bornyl acetate	526055	9.731	9.783	2.7
12	10.342	Piperitone oxide	493269	10.311	10.368	2.5
13	11.141	β-Caryophyllene	1152715	11.084	11.177	5.8
14	11.628	Germacrene D	462701	11.597	11.659	2.3